



Instruction Manual



Model

9015

EURO-PRO Operating LLC: 94 Main Mill Street, Door 16, Plattsburgh, NY 12901, Tel.: 1 (800) 361-4639
4400 Bois Franc, St. Laurent, Quebec, H4S 1A7, Tel.: 1 (800) 361-4639

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety should always be followed, including the following:

Read all instructions before using this sewing machine.

DANGER: To reduce the risk of electric shock:

1. An appliance should never be left unattended when plugged in.
2. Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
3. Always unplug the machine before replacing the light bulb. Replace bulb with same type 5W.

WARNING: To reduce the risk of burns, fire, electric shock or injury to persons:

1. Do not allow to be used as a toy. Close attention is necessary when this appliance is used by or near children.
2. Use this appliance only for its intended use as described in this manual. Use only the attachments recommended by the manufacturer as contained in this manual.
3. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to the nearest authorized dealer or to EURO-PRO Operating LLC for examination, repair, electrical or mechanical adjustment.
4. Never operate this appliance with any air openings blocked. Keep the ventilation openings of the sewing machine and the foot controller free from accumulation of lint, dust and loose cloth.
5. Keep fingers away from all moving parts. Special care is required around the sewing machine needle.
6. Always use the proper needle plate, a wrong needle plate can cause the needle to break.
7. Do not use bent needles.
8. Do not pull or push the fabric when sewing. It may deflect the needle causing it to break.
9. With the sewing machine to the "Off" position ("0") when making any adjustments in the needle area such as threading the needle, changing the needle, threading the bobbin or changing the presser foot and light.
10. Always unplug the sewing machine from the electrical outlet when removing the covers, lubricating or when making any other user servicing adjustments mentioned in the instruction manual.
11. Never drop or insert any object into any opening.
12. Do not use outdoors.
13. Do not operate where aerosol spray products are being used or where oxygen is being administered.
14. To disconnect, turn all controls to the "Off" ("0") position, then remove the plug from the electrical outlet.
15. Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
16. Handle the foot controller with care and avoid dropping it on the floor. Be sure not to place anything on top of it.
17. Use only the handle to lift and move the machine.
18. Do not expose the machine or machine plastic case to direct sunlight. Also, do not keep it in a very warm or damp place.

SAVE THESE INSTRUCTIONS

This sewing machine is intended for household use only.

TABLE OF CONTENTS

Main Parts	03
Accessories	04
Connecting the Machine	05
Foot Controller	05
Extension Table	06
Changing the Presser Foot	06
Inserting the Needle	07
Principal Parts of the Machine	08
Control Panel	08
Stitch Selection Buttons	08
Stitch Length	08
Stitch Width	08
Indicator Light	08
Needle Up/Down Button	08
Reverse Stitch Button	08
Hand Wheel	08
How to Select a Stitch Pattern	09
How to Select the Stitch Length	10
How to Set the Needle Position	10
How to Select the Stitch Width	10
Bobbin Setting	11
Removing the Bobbin	11
Winding the Bobbin	11
Inserting the Bobbin	12
Threading the Machine	13
Preparing to Thread the Machine	13
Threading the Upper Thread	13
Threading the Needle Eye	14
Drawing Up the Bobbin Thread	14
Starting To Sew	15
Start and End a Seam	15
Reverse Stitching	15
Turning Corners	16
Sewing Heavy Fabrics	16
Sewing Over Overlapped Areas	16
Width of Seam Allowance	16
Adjusting the Thread Tension	17
Matching Needle - Fabric - Thread	18
Straight Stitch Sewing	19
Zigzag Stitch Sewing	20
Satin Stitching	20
Multi-Stitch Zigzag	21
Elastic Stitch Sewing	21
Free-Arm Sewing	22

TABLE OF CONTENTS



Overcasting - Overlocking	23
Using the All-Purpose Foot	23
Using the Overcasting Foot	23
Blind Hem Stitching	24
Buttonhole Sewing	25-26
Darning Plate	27
Sewing On Buttons	27
Patchwork	28
Inserting Zippers - Center Insertion	29
Inserting Zippers - Lapped Insertion	30
Applique	31
Scallop Stitch	32
Scallop Hem	32
Scallop Edging	32
Quilting	33
Gathering	34
Single Layer Gathering	34
Two Layer Gathering	34
Roll (Narrow) Hemming	35
Cording	35
Darning Foot	36
Attaching the Darning Foot	36
Darning	36
Free-Hand Embroidery	36
Free-Hand Monogramming	37
Decorative Stitching	38-41
Quick Reference Guide for Utility Stitches	42-43
Maintenance	44
Troubleshooting	45-46

MAIN PARTS

1. Light Cover
2. Needle Up/Down Button
3. Indicator Light
4. Reverse Stitch Button
5. Thread Cutter
6. Extension Table/Storage Compartment
7. Bobbin Winder Tension Disc
8. Thread Tension Regulator
9. Spool Pin
10. Bobbin Winder Shaft
11. Bobbin Winder Stop
12. Hand Wheel
13. Control Panel



14. Lower Thread Guide
15. Needle Threader Lever
16. Needle Threader
17. Buttonhole Lever
18. Presser Foot Thumb
19. Needle Plate
20. Bobbin Cover
21. Presser Foot Lifter
22. Needle Clamp Screw
23. Needle Thread Guide
24. Presser Foot
25. Slide Cover Release Button

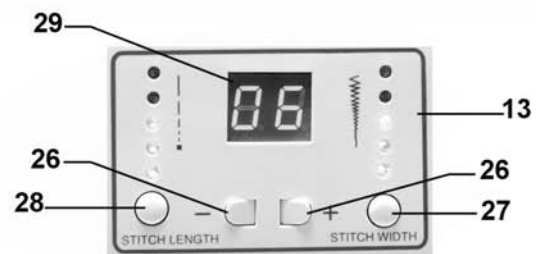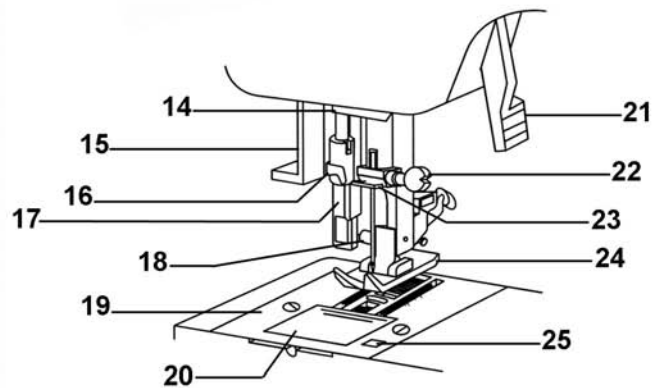

26. Pattern Selector Buttons
27. Stitch Width Button
28. Stitch Length Button
29. Stitch Selection Display

30. Carrying Handle
31. On/Off Switch
32. Foot Controller Jack
33. Terminal Box
34. Extra Spool Pin Holder
35. Foot Control
36. Power Cord

